

Sunflame®

Sunflame Enterprises Private Limited.
58, Sector 27C, Mathura Road,
Faridabad-121 003, Haryana, India

For complaint redressal you may either dial (+91) 129-2275723
or e-mail us at customer@sunflame.com or
write in at the above address.

www.sunflame.com

Sunflame®

Halogen Heater
SF-931



Read all instructions carefully before use


IMPORTANT SAFEGUARDS

When using an electrical appliance, basic safety precautions should always be observed, including the following:-

- Please read these instructions carefully before using the appliance.
- This appliance is for household use only.
- Check that the mains voltage corresponds to that stated on the rating label of the appliance.
- Only responsible person should operate the appliance. Keep this appliance out of reach of children or incompetent persons.
- Make sure, not to place the power cord near sharp objects or hang over an edge of a table. Do not run/Place the cord of the heater under carpeting and do not cover the cord with loose rugs, runners or something similar. Arrange the cord away from walkways in order to avoid anyone tripping over it. Do not wind the power cord around the appliance and do not bend it.
- Please check the power cord for damages from time to time. Do not operate the heater with a damage cord or plug, or after the heater malfunctions, has been dropped, or damaged in any manner. Kindly take it to the nearest authorized service center for repair.
- Never use this appliance on or near hot surfaces.
- Avoid the use of an extension cord as it may overheat and cause a risk of fire.
- Before operating the appliance always make sure that it has been placed on a flat and stable surface.
- Never cover the appliance with a cloth or something similar when it is in use.
- The heater must not be placed near an electrical outlet while it is in operation. Make sure that the heater is never facing the power socket when it is in operation.
- Use the heater in a well-ventilated area. To prevent a possible fire, do not block the front portion, air intakes or exhaust openings of the heater in any manner. Do not use the heater on soft surface.
- Do not place this heater near flammable materials, surface or substances such as curtains; draperies etc, as there may be a risk of fire. Keep these flammable materials at least 2 meters away from all sides of the heater.
- Do not use the heater in any areas where petrol, paint or other flammable liquids are stored e.g. garages workshops etc. as the heater becomes hot while in operation and this can lead to a very dangerous situation.
- Never use this heater in immediate surroundings of a bath, shower or a swimming pool. Never place the heater at a place, when it may fall into a bathtub or other water/ liquid containers. This can be very dangerous.
- This heater is hot when in use. To avoid burns and personal injury, do not let bare skin touch hot surfaces.
- Always make sure that no other appliances are in use on the same electrical circuit/point as this product. This may cause an overload.
- Do not insert any foreign objects through the front grill/guard of the appliance as there is a danger of electric shock doing so and this will also damage the product.

- When the appliance is not in use always unplug the cord from the power supply. Do not attempt to remove the plug from the wall socket with wet hands or by pulling the cord.
- Never use the appliance outdoors and always place it in a dry environment.
- Never immerse the appliance or its parts in water or any other liquids for cleaning purposes, as this will damage the product and create a risk of electric shock. Follow the instructions in section "Cleaning & Care" of this manual.
- Any repair required, should be undertaken by an authorized service center. Never try to repair the product yourself or by any unauthorized person.
- Never use this product for other than its intended use.
- Save these instructions for future reference.

PART IDENTIFICATION

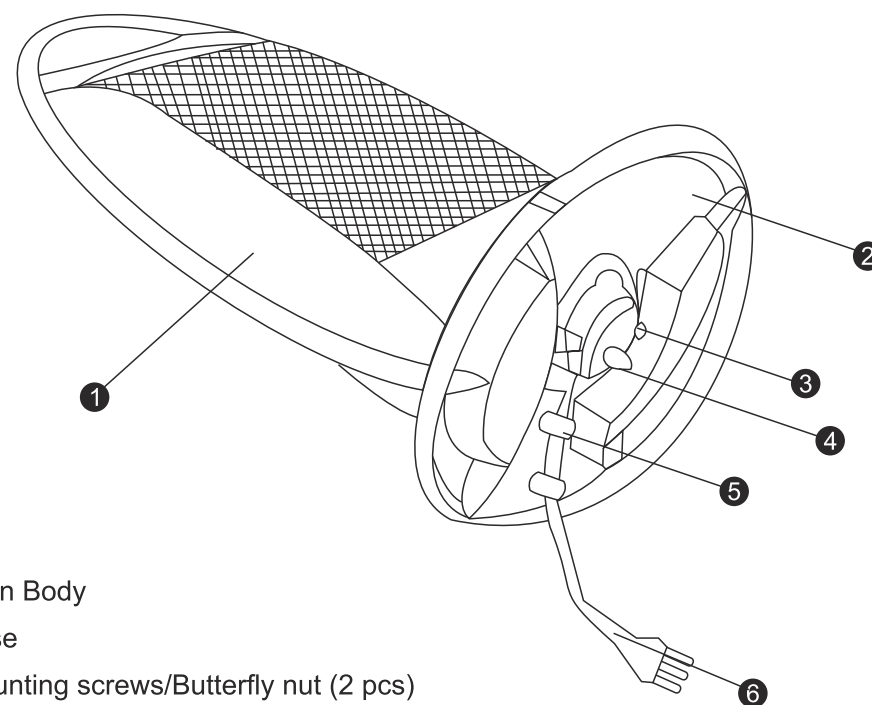

1. Main Body
2. Base
3. Mounting screws/Butterfly nut (2 pcs)
4. Tip over safety switch
5. Power cord slots/guide
6. Power Cord

HOW TO OPERATE AND MAINTAIN

ASSEMBLY

Take the heater out of its packing box carefully and check for any damage. Remove all the packaging and keep it out of reach of children. Remove the base mounting screws from the bottom of the heater. Guide the power cord of the heater through the center (opening) of the base. Fix the base onto the heater and then properly screw the mounting screws back on to the heater. Please make sure that the screws are properly fastened. Then, fix the power cord onto the wire holding slots provided at the bottom to the base. Place the heater correctly on a flat and stable surface. Your heater is ready for use.

PLACEMENT GUIDE FOR THE HEATER

The heater should only be operated at a minimum distance of 2 meters from a wall or any other object. Position the heaters properly in order to optimize the heating of the room

OPERATING THE APPLIANCE FOR THE FIRST TIME

When the appliance is switched on for the first time, it may emit a slight smell. Please do not worry as the smell will disappear shortly. Please ensure sufficient ventilation during this time.

FUNCTION CONTROL

Press the “power”(orange) button, the center heater tube will start operating (400W – low heat output). Press the next button, indicating the top heater tube. The top heater tube will also start operating (800W – Medium heat output). Press also starts operating (1200W-High/full heat output). In order to reduce the heating, press the “bottom” or “top” heater tube buttons again, they will stop operating. To switch off the heater, press the power button again. Unplug the heater from the power supply.

OSCILLATION/TURN FEATURE

This heater comes with an oscillation/ turn function. In order to use this function, press the oscillation/turn control switch on the control panel. The heater will start oscillation left to right. Press the switch again in order to stop this function.

TIP-OVER SAFETY FEATURE

This heater comes with a tip-over safety feature. If the heater is tilted or tips over while in operation, it switches off immediately for safety. In this case, kindly unplug the appliance from the power outlet, place the heater correctly on a stable and flat surface and then switch it on again.

OVERHEAT PROTECTION

This heater has an overheat protection safety device. The safety device disconnects surface appliance in case of overheating, by means of a thermal fuse.

CLEANING & CARE

1. Always make sure to disconnect the safety heater from the power supply and allow the heater to cool down completely, before you start cleaning the heater.
2. Never immerse the heater or its parts, power cord or plug in water to any other liquids for cleaning.
3. The main body of the heater may be wiped clean with a slightly damp, lint free cloth and then with a soft dry cloth.
4. Do not use any cleaning chemical such as detergents and abrasives, as this will damage the product beyond repair.
5. When not in use, always store the heater in a clean and dry place.
6. In case of any malfunction, do not try to repair the product yourself or by any unauthorized person, as this may result in a fire hazard or electric shock. Always contact the nearest authorized service center.

NOTE

In view of continuous improvement, the design and specifications of the product are subject to change without prior notice.

TECHNICAL SPECIFICATION

Model	Rated Power	Rated Voltage	Frequency
SF-931	1200W	230V	50Hz