



Sunflame Enterprises Private Limited
58, Sector 27C, Mathura Road,
Faridabad-121 003, Haryana, India

Incase of any suggestion / complaint, please
contact customer care at 1860 330 9999 or
e-mail at customercare@sunflame.com or
write in at the above address.

www.sunflame.com

Sunflame®

Heat Convecter
SF-917



Instruction Manual

CARING OF PRODUCT

**The symbols on the function switch are explained below (FIG.1)

- In case the product has now been used for a long time, Please run the appliance on * position for 10 minutes to ensure that the motor becomes free. If the motor does not start, DO NOT run the switch to "Heating"; please contact the authorized service centre.
- When cleaning the appliance, ensure that the mains are disconnected. Allow the heater to cool down completely and then wipe with a soft dry cloth.
- At the time of storage, thoroughly clean the appliance and store it in a clean and dry place. Keep it away from dust.

TECHNICAL DATA

| Model No | SF-917 |
|--------------------------|---|
| Thermostat | Provided |
| Thermal Cutout | Provided |
| Power Supply | 230V, 50Hz |
| Wattage (W): | |
| 1 st position | 1000 watts |
| 2 nd position | 2000 watts |
| Motor Wattage: | |
| Max. Speed (w) | 21 |
| RPM | 2400 |
| Fan Blade | Twin Blade, well balanced |
| Cord | Copper conductors, PVC sheathed, 3 pin moulded plug |


IMPORTANT SAFEGUARDS

When using electrical appliances especially when children are present, basic safety precautions should always be followed, including the following:

- Read all instructions before using. To protect against electrical shock, do not submerge the heater or allow AC cord to come in contact with water or other liquids.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Do not operate your appliance with a damaged cord or plug, or after the heater malfunctions, or has been dropped or damaged in any matter. Return heater to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter or touch hot surfaces, including the stove.
- Always unplug the heater before assembling, disassembling, cleaning.
- Sieve and mesh are delicate, handle carefully. Avoid damage being done to screw.
- Before plugging into a socket, check whether output voltage from socket corresponds to the rating label of the appliance.
- Do not plug the heater into the power supply until it is fully assembled and always unplug before disassembling the heater or handling the blade.
- Do not allow children to use the heater without supervision.
- Do not let the unit, cord, or plug get wet.
- Always disconnect the heater from the supply if it is left unattended and before assembling, disassembling or cleaning.
- Switch off the heater and disconnect from supply before changing accessories or approaching parts which move in use.
- This heater is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the heater by a person responsible for their safety.

- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not cover the heater when in use or when hot. Keep it away from curtains or loose clothes and do not operate it when kept on carpet, sofa chair or like furnishings.

PART IDENTIFICATION

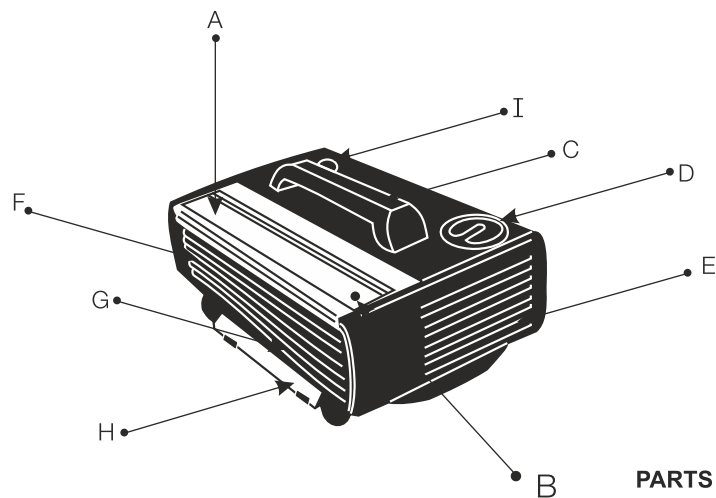

PARTS NAME:

- A. Top front
- B. Power Indicator
- C. Handle
- D. Fan speed selector
- E. Side grill
- F. Front grill
- G. Heating element
- H. Adjustable stand
- I. Temperature control

HOW TO USE THE APPLIANCE

Keeping in view customer requirements the Heat Convector is designed with thermostat to maintain the desired temperature.

For this follow the steps given below:

- **Step 1** Switch ON the Heat Convector by keeping it in upright position.
- **Step 2** Keep the Thermostat to the max. position and select max. fan speed (0 0).
- **Step 3** Once the desired room temperature is reached rotate the thermostat Knob back to mid level & change fan speed suitably.
- **Step 4** The Heat Convector will now automatically maintain this desired temperature.

Fig.1

| SYMBOL | MEANING |
|--------|------------------|
| OFF | OFF |
| * | FAN ONLY |
| • | Heating at 1000W |
| • • | Heating at 2000W |

INSTALLATION GUIDELINES

Placement of Heat Convector

For best results, keep the Heat Convector away from walls and curtains. Maintain minimum distances at all sides as shown in the figure.

