

www.sunflame.com

Sunflame[®]



Pop-up Toaster
SF-153



Sunflame[®]

Sunflame Enterprises Private Limited.
58, Sector 27C, Mathura Road,
Faridabad-121 003, Haryana, India

For complaint redressal you may either dial (+91) 129-2275723
or e-mail us at customer care@sunflame.com or
write in at the above address.


www.sunflame.com

Please read all instructions carefully before using

IMPORTANT SAFEGUARDS

- Before switching on, ensure that the voltage on the characteristic plate is the same as in your home.
- Ensure that the wall plug current take-off is adequate.
- First use the toaster for a few minutes without bread . There will be some smoke at first: this is perfectly normal.
- The toaster reaches very high temperatures, particularly in the area of the openings for the bread.
- Do not use the toaster close to or under curtains or other inflammable materials: it can cause burn.
- Do not leave the toaster in operation without supervision.
- Use only pre-sliced bread.
- Do not place the cord or any other object over the bread openings on the toaster while it is in use.
- Do not cover the toaster while it is in use.
- Keep the toaster away from flames or hot areas.
- Keep the toaster out of reach of children.
- Do not insert utensils in the toaster.
- If the cord is damaged, to avoid hazards, it must be replaced by the manufacturer or by an Authorized Technical Service.
- Do not touch hot surface.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system.

PART IDENTIFICATION

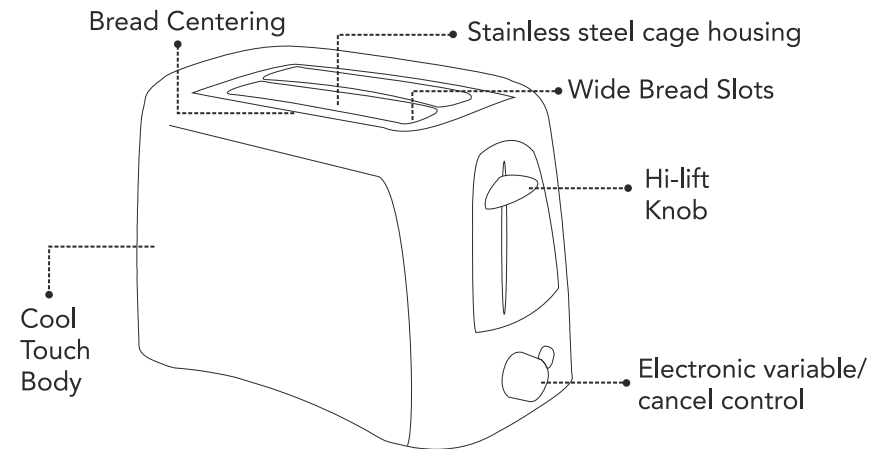

OPERATION

- Plug the toaster in and adjust it to the type of toasting you require, with the regulator
- Put the bread into the openings and press the lift knob down. It remains down until the bread is toasted.
- Once toasted, the slices appear in the openings and lift knob returns to its original position. The toaster switched 'OFF' automatically.
- Press the 'STOP' and automatic eject button if you wish to stop the toaster this switched it 'OFF'
- If the bread sticks in the toaster, unplug it, wait for it to cool, and remove the bread.

CLEANING AND MAINTENANCE

- Ensure that the toaster is unplugged before cleaning it.
- Never place it in water or any other liquid.
- To clean, UNPLUG THE TOASTER AND ALLOW TO COOL.
- Do not insert any object, including bread, in the toaster.