

Sunflame[®]

Automatic Electric Cooker
SF-405



Sunflame[®]

Sunflame Enterprises Private Limited
58, Sector 27C, Mathura Road,
Faridabad-121 003, Haryana, India

For complaint redressal you may either dial 1860 330 9999
or e-mail us at customercare@sunflame.com or
write in at the above address.

www.sunflame.com

Instruction Manual

CAUTION

Keep away from direct sources of heat or sunlight to prevent from possible damage. Do not cover or obstruct the steam vent. Do not touch the hot steam from the steam vent while the cooker is in use. Always keep the rice cooker unplugged when not in use. To avoid damage to the cooker, do not use a cooking pot or accessories from any other brand or model.

(This type of damage is not covered under the warranty)

IMPORTANT SAFEGUARDS


Basic safety precautions should always be followed while using electrical appliances, including the following:

1. Read all instructions carefully before using the appliance.
2. Always attach the power cord to the appliance before plugging into the wall outlet. Unplug the power cord from the outlet, when not in use.
3. The use of accessories/attachments not recommended by the appliance manufacturer may cause injuries, hence should not be used.
4. Do not place the appliance on or near a hot gas or electric burner or in a heated oven. Place the appliance on a level surface.
5. Do not let electric cord touch hot surface or hang over the edge of a counter or table. The power cord should also be away from the reach of children.
6. Be extremely careful when moving the appliance, while the food is being cooked.
7. Do not open the lid while cooking is in progress, this may cause scalding.
8. Always unplug the appliance and allow it to cool before cleaning.
9. To protect against electric shock, do not immerse the appliance and electric cord in water or other liquids. Do not allow liquid to come into contact with the electrical parts.
10. Do not operate the appliance outdoors.
11. Do not use the appliance for other than intended use.
12. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experiences and knowledge, unless they have been given instruction for use of the appliance or are in supervision of the person responsible for their safety.

1

13. Close supervision is necessary when this product is being used near children.
14. Children should be monitored, in order to make sure they don't play with the appliance.
15. Do not use the appliance if it has malfunctioned or has been damaged in any way. Take it to an authorized service centre for repair.
16. This Product is for Household Use Only.

PART IDENTIFICATION

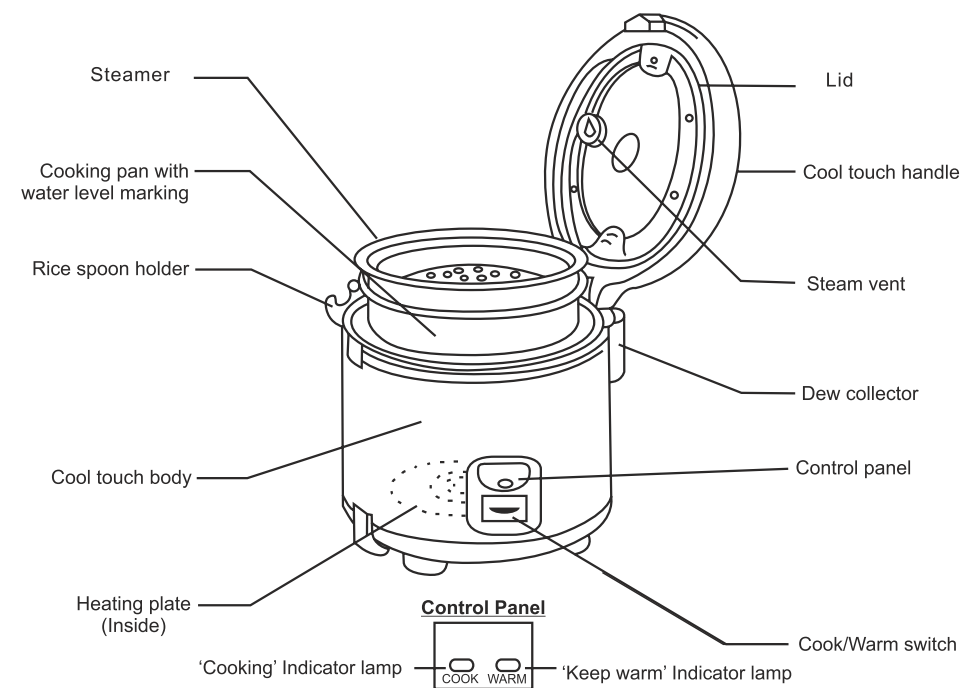

2

Accessories:

1. Steamer
2. Rice Cooking Plate
3. Measuring Cup
4. Serving Spoon
5. Detachable Power Cord

BEFORE FIRST USE

Remove all packaging material. Wash the cooking pan in warm, soapy water using a sponge or dishcloth. Rinse thoroughly. Wipe the lid and make sure the exterior of the cooking pan is dry.

INSTRUCTIONS OF USE

1. Measure out required quantity of rice using the measuring cup provided. Wash rice in a sieve until the water is clear. Your rice cooker comes with a rice plate, ensure to place the rice plate correctly at the bottom of the cooking pan before putting the rice in the cooking pan. Add water up to the level which corresponds to the measure of rice used, E.g. For 4 cups of rice, add water to level 4 as marked on the inside of the cooking pan. However, the quantity of water used will depend on the age and strain of the rice, as well as personal taste. Do not exceed the maximum water level mark.
2. Set the cooking pan inside the rice cooker, making certain that the base is dry. Ensure that cooking pan is in direct contact with the heating element by rotating it slightly left and right until it seats properly. The rice cooker may malfunction if the cooking pan is incorrectly positioned. Always keep the exterior bottom of the cooking pan and heating plate clean and dry.
3. When ready to cook, connect the power supply cord to the rice cooker first, then plug into an AC wall outlet. Press 'COOK'. Once rice is cooked, a built-in heat sensor will automatically switch to WARM mode. Allow rice to rest for about 15 minutes before serving.
4. Using the rice spoon, huff up the rice before serving. Do not use metal serving spoons. Remember to unplug the rice cooker when not in use.
5. When rice is cooked, it can be kept warm for a long time.





3

CLEANING & MAINTENANCE

Always unplug the rice cooker and allow it to cool before cleaning.

1. Wash the cooking pan in warm, soapy water using a sponge or dishcloth. Do not use harsh abrasive cleaners or products to clean, in order to avoid damage. Rinse and dry thoroughly. Keep the cooking pan scrupulously clean, especially if salt or salty ingredients have been used. Salt is very corrosive in nature and may damage the cooking pan, if not cleaned properly.
2. Detach the inner lid from the shaft by gently tugging it upwards. Soak briefly and wash clean.
3. Gently remove the dew collector (fitted onto the back of the rice cooker) by pulling downwards. Discard the water after every use.
4. Wipe over the surfaces with a damp cloth, ensure that food or water particles are not left behind in the body. Do not immerse the rice cooker in water or other liquids.
5. Make sure the heating plate is clean and free of food left overs, which could interfere with the proper functioning of the rice cooker. Any burnt-on residue could be removed by gently scrubbing the heating plate with a damp piece of soft cloth. Then wipe the heating plate with dry cloth.

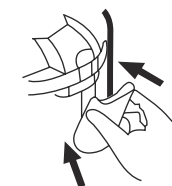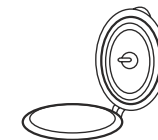

SOME MORE CAUTION :

1. Refrain from using a multi-purpose adaptor or extension wire.
2. Do not operate the rice cooker when empty or when maximum capacity is exceeded.
3. Keep away from direct sources of heat or strong sunlight to prevent possible damage.
4. Do not cover or obstruct the steam vent. Keep the rice cooker away from overhead cabinets or equipment.
5. Replace rubber gasket on the lid when it is showing signs of fatigue or wear. (Please contact your local service centre for replacement details.)
6. Always keep the rice cooker unplugged when not in use.
7. Do not immerse the rice cooker or supply cord in water or any liquid or allow any liquid to come into contact with electrical parts.

IMPORTANT NOTE

In view of continuous improvements, the design, specifications and features of the product are subject to change without prior notice.

4