

www.sunflame.com

Sunflame®



Pop-Up Toaster
SF-155



Please read all instructions carefully before using

Sunflame®

Sunflame Enterprises Private Limited.
58, Sector 27C, Mathura Road,
Faridabad - 121 003, Haryana, India

For complaint redressal you may either dial (+91) 129-2275723
or e-mail us at customercare@sunflame.com or
write in at the above address.

IMPORTANT SAFEGUARDS



When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the toaster.
3. Do not touch hot surfaces. Use handles or knobs only.
4. To protect against electrical shock, do not immerse cord, plug, or any part of the toaster in water or other liquid.
5. Close supervision is necessary when it is used by or near children.
6. Unplug unit from outlet when not in use and before cleaning.
7. Do not operate any appliance with a damaged cord or plug, or in an abnormal state. If its main cord is damaged, it must be replaced by the manufacturer, the nearest service agent or a qualified person.
8. Do not let the cord hang over edge of table or counter, or touch hot surfaces.
9. Do not place on or near a hot gas or electric burner, or in a heated oven.
10. Do not use the appliance for other than its intended use.
11. Oversize food, metal foil packages or utensils must not be inserted in the toaster as they may cause fire or electric shock.
12. Bread may burn, so toasters must not be used near or below curtains and other combustible materials, and must be watched.
13. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
14. Don't attempt to dislodge food when the toaster is in operation.
15. Be sure to take the bread out carefully after toasting so as to avoid injuries.

CAUTION


1. Remove all protective wrappings prior to toasting.
2. If toaster starts to smoke, Press Cancel to stop toasting immediately.
3. Avoid toasting bread with butter applied on surface.
4. Never attempt to remove bread jammed in the slots without unplugging the toaster from the electrical outlet first. Be sure not to damage the internal mechanism or heating elements when removing bread.
5. The bread slot is only applicable for toasting regular bread slice.
6. In order to achieve uniform color we recommend that you should wait minimum 30s between each toasting so that color control can reset automatically.

CLEANING AND MAINTENANCE

1. Before cleaning, unplug the appliance and let the appliance cool down completely.
2. Wipe outer surface with soft, dry cloth, never use metal polish.
3. Pull out crumb tray at the bottom of the toaster and empty it. If toaster is used frequently, accumulated bread crumbs should be removed at least once a week. Make sure the crumb tray is completely closed before using the toaster again.
4. When not in usage or being stored, the power cord may be wound under the bottom of the toaster.

16. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
17. Keep the appliance and its cord out of reach of children less than 8 years.
18. Warning: If toast of small bread slices less than 85mm length, you must pay attention to the potential risk of burning when taking out the slices.
19. The appliance is not intended to be operated by means of an external timer or separate remote-control system.
20. Don't use the appliance outdoors.
21. This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farmhouses;
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments.
22. Save these instructions.

KNOW YOUR TOASTER

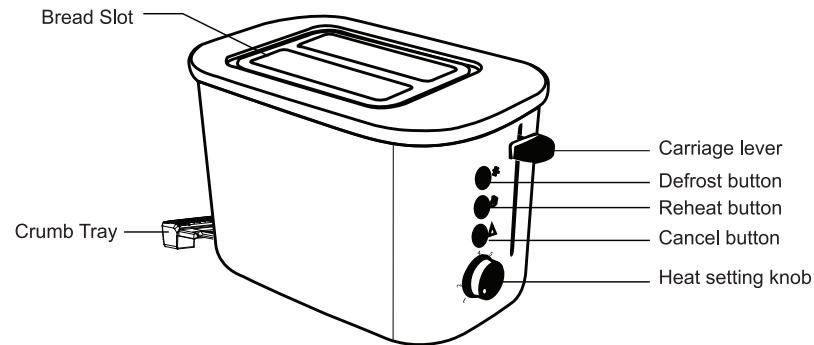

FOR THE FIRST USE

During first use, do not use slices for toasting as there will be some odor or fumes coming out from toaster due to oil or manufacturing residue left over. It is normal and will not occur after initial use, for the first use, it is suggested the operation, according to the below steps, except without bread, then let the toaster cool down and begin toasting the first slice.

USING YOUR TOASTER

1. Put bread slice into the bread slot, which can be inserted two slices at most every time.

NOTE: Make sure the crumb tray is completely positioned in place before using.

2. Plug the power cord into the outlet.
3. Set color control knob to your desired color. There is 7-position level (see fig.1), the lowest "1" is for light and the highest "7" is for dark. The bread slice can be toasted to golden color at the middle position.

NOTE:

- 1) Toasting color for one slice is darker than that for two bread slices at the same level.
- 2) If toasting continuously, toasting color for the latter bread is darker than that for the previous bread at the same level.

4. Lower carriage handle down vertically until it is latched in place, the indicator of Cancel will be illuminated, and the appliance will begin toasting at once.

NOTE: The carriage handle can only be latched when the appliance is plugged in.

5. Once the bread has been toasted to the preset color, the carriage handle will automatically pop up.

NOTE: During toasting, you may also observe the toasting color. If it is satisfactory, you can press the Cancel button to cancel the operation at any time, but never lift carriage handle to cancel toasting.

6. If you want to toast frozen bread, firstly press Defrost button and the indicator of Defrost button will be illuminated, set color control knob to your desired color, and then lower carriage handle down vertically until it is latched in place. In this mode bread will be toasted to your desired color.

7. If you want to warm cold toasted bread, firstly press the Reheat button and the indicator of Reheat button will be illuminated, and then lower carriage handle vertically until it is latched in place. In this mode toasting time is fixed, so long as time runs over, the carriage handle will automatically spring up and end up the reheating process.