

www.sunflame.com

Sunflame®



Steam Iron
SF-308



Please read all instructions carefully before using

Sunflame®

Sunflame Enterprises Private Limited.
58, Sector 27C, Mathura Road,
Faridabad - 121 003, Haryana, India


For complaint redressal you may either dial (+91) 129-2275723
or e-mail us at customercare@sunflame.com or
write in at the above address.

SPECIFICATION

Rated Voltage	230V	Temperature Adjusting Range	150~220°
Rated Frequency	50Hz	Steam Capacity	10~20g/min
Rated Power	1250W	Kind of Appliance	Class I
Tank Capacity	150g		

MAIN FEATURES

The product has many functions such as temperature regulating, Spraying, Dry Ironing, Steam, Strong Steam, etc. and is with characteristics: luxury shape, high heat efficiency, easy using, good ironing result, work saving and time saving, and so on.

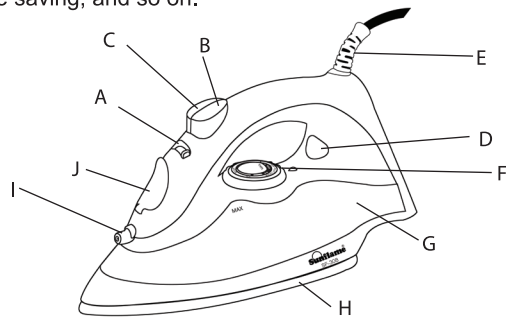

- A: Steam Regulating Knob
- B: Spraying Button
- C: Strong Steam Button
- D: Indicator Lamp
- E: Power Cord
- F: Temperature Adjusting Knob
- G: Water Tank
- H: Soleplate
- I: Spraying Nozzle
- J: Cover of Water Filling Mouth

1. HIGH PRECISION TEMPERATURE ADJUSTER: High precision temperature adjuster is used; it is called thermostat. Temperature range can be fixed with this according to the kind of material being ironed.

2. THERMAL FUSE PROTECTING: When the working temperature exceeds its normal zone, the fuse will melt automatically, and cut off the power supply. When such failure happens, it must be sent to its service agent in order to avoid a hazard.

13. When using an extension cord with your appliance, make sure the extension cord is correctly wired, and rated for its use.
14. This product is intended for household use only.
15. Do not attempt to repair the appliance yourself; instead, take it to Sunflame owned or Authorized Service Centre for repairs.
16. Save these instructions carefully.

USAGE



BEFORE USING YOUR IRON

1. Your iron is to be used for indoor domestic usage only. Before using for the first time, check if the voltage rating on the base plate corresponds to the mains voltage at your home.
2. Some parts of the iron have been slightly greased and as result the iron may smoke slightly when switched ON for the first time. After a short while, however, this will cease.





IRONING TIPS:

1. Sort the articles to be ironed according to the fabric. Ironing instructions are usually stitched onto and inside seam of the garment and those should be followed at all times, start your ironing with the fabrics requiring the lowest heat setting.
2. If you are unsure of the fabric content of a garment, test a small area (a seam or inside hem) before ironing.
3. Set the appropriate ironing temperature indicated in the ironing instructions or in the fabric table by means of the thermostat dial.
4. Pull open the cap of water tank inlet, fill water into water tank until it reaches the "MAX" position. Water capacity is 150g.
5. Press the cap back to its original position to avoid any leakages.
6. Turn the temperature regulating knob to the "0" position, ensure the iron standing vertically is on the smooth and stable place. Now insert the mains plug into the socket and switch on. Indicator light will start to glow.
7. After about 1.5 to 3 minutes, the iron will be ready to use once the indicator light has switched off and steaming will start after adjustment of steam knob to desired level.
8. Press the steam button, the steam will spurt continuously (you can use it in vertical or flat position). If you want to stop, just turn off the steam button

9. During ironing, if local area on cloth needs more steam to remove creases, you can press Spray button by pointing the nozzle in desired direction and water will get sprayed.
10. If there is no steaming, it means there is no water in water tank. At this moment, you must turn OFF the steam button. If you want it to continue ironing, pull out the plug first, then fill in water in tank. Put the mains plug into the socket and after re-heating you can continue to use iron.
11. After ironing is complete, turn the temperature regulating knob to "0" position, pull the mains plug out of the socket. If iron is not going to be used for a long period of time, please empty the water tank out and then turn the temperature regulating knob to the "MAX" position and switch on the iron. Press the steam button repeatedly, till steam stops coming out. This method is used to prevent any remainder water inside boil off box, thus preventing damage to steam function.

HEAT SELECTION

Attention:

Material of Cloth	Temperature Setting	Marks in Clothes	Preferable Ironing Method
Man-made Cotton	●		Ironing on inside surface of clothes without any steam or cover a piece of cloth on the clothes you want to iron
Synthetic Fibre	●		Dry ironing the inside surface of clothes
Silk	● ●		Dry ironing the inside surface of clothes
Wool	● ●		
Cotton	● ● ●		According to the thickness and type of cloth to be ironed with steam. For some fuscous clothes, we'd better adopt to inside surface ironing
Linen	● ● ●		

IMPORTANT SAFEGUARDS

While using electrical appliances, in order to reduce the risk of fire, electric shock, and/or injury to persons, basic safety precautions should be followed:

1. Read all instructions carefully, even if you are familiar with the appliances.
2. To protect against risk of electric shock, do not immerse the appliance, cord set or plug in water or other liquid.
3. To clean, wipe the exterior with a damp cloth.
4. Close supervision is necessary when any appliance is used near children. Never leave an appliance unattended when in use.
5. If the supply cord is damaged, it must be replaced by the manufacturer if its service agent or a similar qualified person in order to avoid hazard.
6. Switch OFF and remove the plug from the power outlet when not in use before assembling or disassembling parts, cleaning or carrying out any maintenance of the appliance. Never pull the cord while unplugging out from power outlet.
7. Do not operate the appliance if its damaged in any manner. Return the complete appliance to your nearest authorized service facility for examination, electrical repair, mechanical repair or adjustments to avoid hazard.
8. The use of attachments or accessories not recommended or sold by this appliance manufacturer may result in fire, electric shock or personal injury.
9. Do not let the cord hang over the edge of a table, counter, or touch hot surfaces.
10. Avoid touching hot surfaces, use handles and knobs.
11. Do not operate or place any part of this appliance on or near any hot surfaces (such as gas or electric burner or in a heated oven).
12. Do not abuse the cord. Never carry the appliance by the cord of yank it to disconnect it from the outlet; instead, grasp the plug and pull to disconnect. =