www.sunflame.com





Coffee Maker SF-704



Please read all instructions carefully before using



Sunflame Enterprises Private Limited. 58, Sector 27C, Mathura Road, Faridabad - 121 003, Haryana, India

For complaint redressal you may either dial (+91) 129-2275723 or e-mail us at customercare@sunflame.com or write in at the above address.


8

1


IMPORTANT SAFEGUARDS



- 1. Before using it, check that the voltage of wall outlet corresponds to a coffee maker rating plate.
- 2. The appliance must be earthed.
- Close supervision is necessary when your appliance is being used near children.
- 4. Do not place the coffee maker on hot surfaces or beside fire, in order to avoid damages.
- Remove plug from the wall outlet before cleaning and when not in use. Allow the appliance to cool down completely before taking off components or before cleaning.
- 6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or it is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
- 7. The use of accessory which is not recommended by the manufacturer may cause injury to persons or damage to the appliance.
- 8. Place appliance on flat surface or table, do not hang its power cord over the edge of the table or counter.
- 9. Ensure that the power cord does not touch hot surfaces of the appliance.
- 10. Some parts of appliance are hot when operated, so do not touch with hand directly.
- 11. Do not immerse the appliance or power cord into water or any other liquids.
- 12. Never leave the empty carafe on the warm plate, otherwise the carafe is liable to crack.

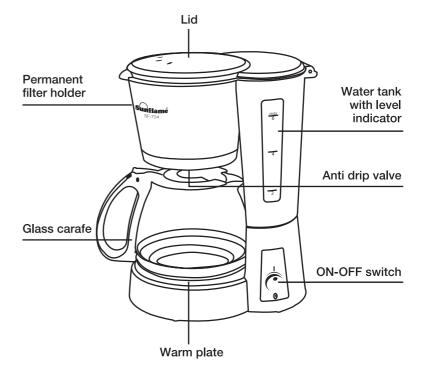

TROUBLESHOOTING

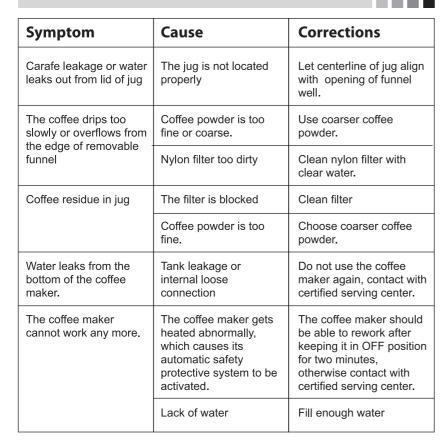

Do not take apart the appliance by yourself if the cause of failure is not found, you had better contact certified serving center.

- 13. Do not use outdoors.
- 14. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- 15. Children should be supervised to sure that they do not play with the appliance.
- 16. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- 17. Save these instruction booklets for future reference.

HOUSEHOLD USE ONLY

BEFORE THE FIRST USE

To ensure the first cup of coffee tastes excellent, you should rinse the coffee maker with warm water as follows:

- 1. Pour 600 ml water into water tank.
- Set Nylon Filter in the funnel (add no coffee ground), then replace the water tank cover.
- 3. Place drip carafe on keeping warm plate and cup on removable shelf.

MAKE DRIP COFFEE

- Open the water tank cover, pour proper drinking water into water tank according to the mark in the tank.
- Add ground coffee to Nylon Filter with measuring spoon, a spoon ground coffee power can make a cup of top-grade coffee, but you can adjust according to the taste yourself.
- 3. Set nylon mesh into the funnel.
- 4. Push drip carafe on keeping warm plate, due care should be taken to ensure center alignment of carafe with that of funnel.
- 5. Press ON /OFF switch, the red indicator will be illuminated and coffee will start to drip out automatically after a while. Note: during operation, at any time, you can take out the carafe to serve, but the time cannot exceed 30 seconds, otherwise the coffee may overflow from the edge of funnel.
- 6. The coffee maker will turn to keeping warm mode if brewing coffee is finished. At the time you can cut off power.

WARNING: Do not leave the coffee maker unattended during making the coffee, as you need to operate manually sometimes!

CLEANING & MAINTENANCE:

- Cut off the power source and let the coffee maker cool down completely before cleaning.
- Clean housing of coffee maker with moisture-proof sponge often and clean water tank, drip tray and removable shelf regularly then dry them.

Note: Do not clean with alcohol or solvent cleanser. Never immerse the housing in water for cleaning.

- 3. Remove the filter by holding the small handle provided on it and carefully dispose off coffee residue as it might be hot/warm. Clean it with cleanser and rinse it thoroughly with clear water.
- 4. Clean all the attachments with water and dry thoroughly.

CLEANING MINERAL DEPOSITS

To keep your coffee maker operating efficiently, you should clean away the mineral deposits left by the water every three months or according to the water quality in your area and the frequency of use. Follow the instructions: Fill the carafe with one part of white vinegar and three parts of cold water, pour the water and vinegar mixture into the tank, do not place coffee ground, brewing the water-vinegar solution as per "Before the first use" instructions, repeat it until no yellow liquid comes out, if necessary, repeat the process. Then drain out the mixture, brew with fresh tap water until no vinegar odor is left.