

# Sunflame®

Steam Iron  
SF-305



## Sunflame®

Sunflame Enterprises Private Limited  
58, Sector 27C, Mathura Road,  
Faridabad-121 003, Haryana, India


Incase of any suggestion / complaint, please  
contact customer care at 1860 330 9999 or  
e-mail at [customercare@sunflame.com](mailto:customercare@sunflame.com) or  
write in at the above address.

[www.sunflame.com](http://www.sunflame.com)

## Instruction Manual

Dear Customer,  
Congratulations! You are now the proud owner of Sunflame Iron. Innovatively designed, using only the highest quality material and components, your Sunflame Iron is designed for years of trouble free performance. Please read this Instruction Manual carefully before using and keep it safe for future reference.

PART IDENTIFICATIONS

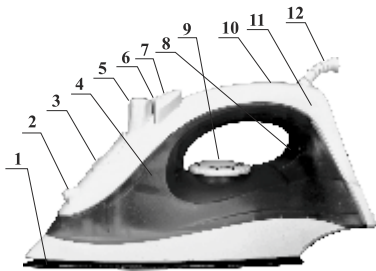

1. Soleplate

2. Spray Mouth

3. Water Window

4. Water Tank

5. Steam Knob

6. Spray Button
7. Boost Button

8. Pilot Light

9. Temperature Control Knob

10. Handle

11. Back Cover

12. Swivel Cord

Save This Instruction Manual For Future Reference

Notes:

- Some parts of the iron have been slightly greased and as a result the iron may smoke slightly when switched on for the first time. It will not happen again after a few uses.
- Before using for the first time, remove any protective films or stickers from the soleplate and the cabinet
- Then clean the soleplate with a soft cloth. When using the iron for the first time, test it on an old piece of fabric to ensure that the soleplate and water tank are completely clean.

TECHNICAL SPECIFICATIONS

Rated Voltage	240V, AC
Rated Frequency	50Hz
Rated Power	1300W

HOW TO USE YOUR APPLIANCES

CHOICE OF WATER

- This iron can be used with normal tap water.
- If the water is particularly hard, it is advisable to use distilled or demineralised water.
- Do not use chemically descaled water or any other liquids for refilling.

HOW TO FILL IN WATER

- Unplug the iron from the wall outlet.
- Make the steam control at (OFF) position down the steam won't out.
- Open the water window and fill in water through the inlet
  - Fill up the maximum level "MAX" of the water tank. Put the water window back to the iron and ensure that it is secured firmly.

**Important:** Remove the water after use.

TEMPERATURE CONTROL SETTING

- Always check first to see whether a label with instruction is attached to the article to be ironed.
- Follow these instructions in all cases.
- If the ironing instructions are missing, then the table below may help you.  
First you should sort the laundry, Wool with a wool. Cotton with cotton etc. Start ironing the fabrics requiring the lowest temperature and progress to the higher ones. Because the iron heats up quicker than it cools down. If the fabric consist of various kinds of fibres (eg. Cotton with polyester) you must always select the lowest ironing temperature of the composition of those fibres.

LABEL	KIND OF TEXTILE	FIBRE MATERIAL
•	Synthetic Nylon Silk	Acrylic Mosacryt Polypropylene Polyurethane
..	Wool	Wool
...	Cotton	Cotton
	Linen	Linen

### SETTING THE TEMPERATURE

- Insert the plug in the wall socket and let the iron be upright.
- Turn the temperature control knob (9) to the correct temperature
- The correct temperature will be reached when the pilot light has turned off. The pilot light will be on and off from time to time indicating that the selected temperature is being maintained.

### SPRAYING

This function can be used any time and it does not effect the ironing temperature.

- Fill water into the iron as described above
- Aim the nozzle to the garment.
- Press the spray knob (6)

### STEAM IRONING

- •• for moderate steam
- ••• or Max for maximum steam
- Fill water into the iron as described above
- Stand the iron on its rear side
- Connect the iron to a suitable mains supply outlet
- Turn the temperature control (9) to the "••" "•••" or "MAX" setting
- The pilot light turns off when the temperature is reached. The iron ready for use.
- Turn the steam knob (5) to the required position, steam starts coming out from the holes in the soleplate.

**Notice:** With conventional steam ironing, water may leak from the soleplate if a too low temperature has been select, if this happens, turn the temperature control (9) to the advised position. Steam will recommence as soon as appropriate temperature has been reached.

### BURST OF STEAM

This function provides an extra amount of steam to remove stubborn wrinkles. Fill the iron with water as described above. Turn the temperature control to the position "MAX". The pilot light turns off when the required temperature is reached. The iron is ready for use. Press the boost button (7) as per indication. Steam will penetrate into the garment removing the wrinkles. Usually all wrinkles can be removed within three pressings.

### DRY IRONING

- Connect the iron to a suitable mains supply outlet.
- Ensure that the steam control knob (5) is in position of no steam.
- Select the setting on the temperature control (9).
- When the pilot light turns off, the requirement temperature is reached. The iron is ready for use.

### CARE AND CLEANING

- Disconnect the iron from the wall socket outlet and let it cool down completely.
- Deposits and other residues on the soleplate can be removed with a rough cloth soaked in vinegar I water solution.
- The casting may be wiped with a damp cloth and then polished with a dry one.
- Never use any abrasives to clean the soleplate.
- Keep the soleplate smooth ; avoid hard contact with metal objects.

### STORAGE

- Turn the temperature control (9) to "MIN" and set the steam control knob to no steam positions.
- Disconnect the iron from the wall outlet.
- Pour any remaining water out of the water tank.
- Stand the iron upright and let it cool down completely.
- The power cord can be wound around the iron.
- Always store the iron in an upright positions.

### SAFETY PROTECTIVE CUT-OUT

In the unlikely event of the thermostat failing, the protection cut-out will operate to prevent the iron over-heating. Then the iron should be taken to the nearest authorized service facility.

## IMPORTANT SAFEGUARDS

1. Please read all instructions carefully before using the appliance for the first time.
2. Before connecting the appliance, check if the voltage indicated on the rating plate corresponds with the mains voltage in your home.
3. Do not use the appliance for other than intended use.
4. The iron should always be switched off before connecting or disconnecting from the power supply. Do not put on the cord to disconnect the plug from the wall socket.
5. Do not use the iron when it is damaged in anyway. Do not operate the iron with damaged cord or plug. Do not replace the power cord or any other parts by yourself. Bring the iron to the nearest authorised service facility or to the shop where you bought it.
6. When you have finished ironing or when you want to leave it for a short while.
  - Stand the iron upright.
  - Disconnect the iron from the wall outlet.
7. Do not allow children to touch the iron or the power cord when ironing.
8. Do not immerse the iron or cord into water or any other liquid.
9. Do not touch hot metal parts, hot water or steam. These parts become hot and may cause burns. Take care if in the tank.
10. The plug and cord should not be allowed to touch the hot sole plate. Let the iron cool down completely before taking it away. Roll the power cord round the iron for storage.
11. Disconnect the iron from the wall socket outlet for filling in water or when you want to remove the water after use.
12. To avoid an overloaded circuit, do not operate another high wattage appliance in the same electric circuit.
13. Never use an extension power cord set that is not approved by a competent authority. The cord should be arranged in a way that it cannot be pulled or tripped over.
14. The iron is for household use only.
15. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety
16. Children should be supervised to ensure that they do not play with the appliance.