



Sunflame Enterprises Private Limited
58, Sector 27C, Mathura Road,
Faridabad-121 003, Haryana, India

Incase of any suggestion / complaint, please
contact customer care at 98109 97700 or
e-mail at customercare@sunflame.com or
write in at the above address.

www.sunflame.com

Cover Back

Sunflame[®]

Mixer Grinder
Style Dx



Instruction Manual

Cover Front


IMPORTANT SAFEGUARDS

The use of any electrical appliances requires the following basic safety rules:

- Always unplug the machine from the power outlet before putting on or removing the blades and before cleaning.
- Never touch the moving parts, blades or disc. Keep hands, hair, clothing, spatula and other utensils away from the Sunflame Mixer Grinder during operation, to avoid personal injury or damage to the machine.
- Fit the blade assembly on the shaft of the large jar only after it is properly attached onto the basic unit. Always fix and remove blades with the help of the spatula.
- Do not use your Sunflame Mixer Grinder without dome lids in place over the jars.
- Do not use your Mixer Grinder on wet surfaces, to prevent electrical hazards.
- Do not try to attach or remove the jar while the motor is running.
- Supervise your Sunflame Mixer Grinder closely while in use. Do not leave it alone while in operation.
- Do not run the Sunflame Mixer Grinder without any load.
- Never place any cloth or plastic sheet under the basic unit, as it may get sucked up and block the ventilation holes in the base, during operation.
- Never use attachments that are not recommended by Sunflame.
- Never wash or immerse that basic unit in water.
- The grinder jar may heat up during dry grinding due to friction (it has nothing to do with the motor). Let it cool for a few seconds and then remove.
- To protect against fire, electric shock and personal injury, do not immerse cord, plug or body in water or other liquid
- Do not operate any appliance with a damaged cord or plug or after the appliance has been damaged in any manner
- Do not use accessories not recommended by the manufacturers, as there is a danger of fire, electric shock or personal injury
- Do not place on or near a hot gas or electric burner or in a heated oven
- Do not allow children to use this Mixer Grinder. Children are vulnerable in the kitchen, particularly when unsupervised and if appliances are being used or cooking is being carried out

- The mains lead should reach without straining the connections
- Do not let the mains lead hangover the edge of a worktop where a child could reach it
- Do not let the lead run across an open space e.g between a low socket and table

PART IDENTIFICATION

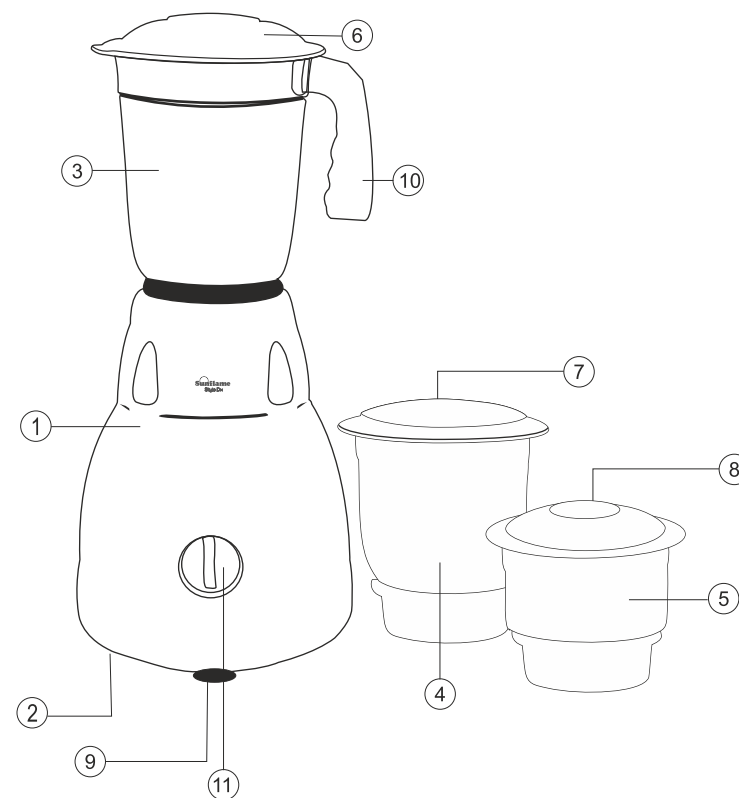

- | | |
|------------------------|----------------------------|
| 1. Body | 7. Grinding Jar Lid |
| 2. Bottom | 8. Chutney Jar Lid |
| 3. Liquidizing Jar | 9. Vacuum Pads |
| 4. Grinding Jar | 10. Liquidizing Jar Handle |
| 5. Chutney Jar | 11. Control Knob |
| 6. Liquidizing Jar Lid | |

HOW TO OPERATE AND MAINTAIN

- Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply, which must be A.C.
- If the socket outlets in your home are not suitable for the plug supplied with this appliance, the plug should be removed and the appropriate one fitted

HOW TO FIT THE JARS

Hold the jar and check if the blade moves freely and rotates. Place the ingredients in the jar. Cover the jar with lid. Place the jar on the basic unit and then turn it clockwise to lock it in the top socket. Plug in. Support lid gently by hand and switch on using the slowest speed and then move on to a higher speed as per requirements. Switch off after operation. For unlocking the jar, turn it anti-clockwise.

HOW TO USE LIQUIDIZING JAR

- This jar can be used for grinding items like soaked rice and dal batter, liquidizing for fruit juices, soups, cocktail, milkshakes, purees etc. The minimum capacity is 1/3 of the jar.
- Fill the jar with the solids to be liquidized such as tomatoes
- Fit the jar on the main unit
- Place the lid on the jar
- If needed, more water can be added. Now switch on the mixer for one minute and you will get finely blended juices and purees
- If ingredients need to be stirred during wet grinding of rice and dal batter, stop the mixer, insert spatula and stir

HOW TO USE DRY GRINDING/CHUTNEY JAR

- This jar can be used for grinding black pepper, roasted coffee seeds turmeric, coriander, red chillies etc. The jar should not be filled more than ½ of the total capacity
- Ensure that the jar is absolutely clean and dry
- Fill the jar with ingredients. Place the lid on the jar and fit the jar on the main unit
- Grind at low speed for 15 seconds and move to higher speeds
- For turmeric, first break into smaller pieces before starting to grind

- This jar can also be used to prepare chutney. The jar must be filled up to the blade level. The jar should not be filled more than ½ of the jar capacity.
- Put the ingredients into the Grinder/chutney jar
- Add a small quantity of water during chutney grinding
- Put the lid on the top of the jar and fit the jar into the main unit
- Stir the ingredients if necessary during grinding
- The ingredients to be grind should not be too large. Cut / break ingredients into small pieces

CLEANING OF THE JAR

- Pour a little soap and water into the jar, close the lid and run it on the main unit at 1st position. This dislodges the food particles lodged inside the jar
- Remove the jar and pour out the soap solution and rinse with tap water
- Wipe the area along the blades with wet cloth and then dry
- Wipe the body with a wet cloth and then dry

OVERLOAD PROTECTOR

- The Mixer Grinder is protected against the sudden overloads. In case such a situation occurs, then your mixer grinder will automatically turn off
- To restart the unit, please wait for 2-3 minutes to allow the motor to cool down and also remove the cause of overload. Press the button located at the bottom of the mixer grinder to restart the unit

TECHNICAL SPECIFICATION

Specifications	Style Dx
Voltage Protection Motor Insulation Power consumption Motor Speed (No Load) Speed Control	230V AC 50 Hz Class - II Universal Class-B 500 Watts 18000 RPM (Approx.) 3 Speed
Material Housing Jar Liquidiser Jar Grinder/Chutney	High quality ABS plastic Stainless Steel Stainless Steel
Capacity Liquidizing Jar Dry Grinder Jar Chutney Jar Main Cord (PVC) Plug	1.00 ltr 0.70 ltr 0.25 ltr 1.50 M Long 6 Amp. 2 Pin Plug